

GEBRAUCHSANLEITUNG

Relaxliege.

- GB - Installation instructions
- F - Instructions d'installation
- I - Istruzioni di montaggio
- E - Instrucciones de montaje

LIEFERUMFANG

SCOPE OF SUPPLY

ÉTENDUE DE LIVRAISON

VOLUME DI FORNITURA

ARTÍCULOS INCLUIDOS EN LA ENTREGA


A = Halter zur Aufbewahrung (optional erhältlich, Art.-Nr.: 3897.1003.0000)

A = Holder for storage (available as an option, Art. Nr.: 3897.1003.0000)

A = Soutien pour dépôt (fourniture optionnelle No. d'art.: 3897.1003.0000)

A = Supporto per deposito (fornitura opzionale, N. d'art.: 3897.1003.0000)

A = Sujetador para almacenamiento (disponible como opción, NO. de art.: 3897.1003.0000)

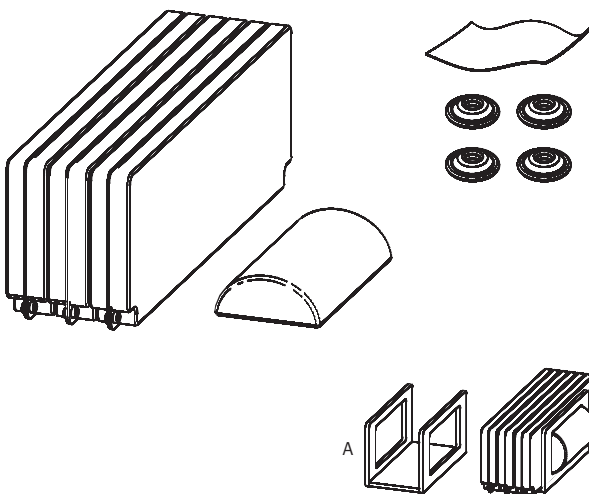

1

EINBAUSITUATIONEN

INSTALLATION SITUATIONS

POSITIONS DE MONTAGE

POSIZIONI D'INSTALLAZIONE

SITUACIONES DE MONTAJE

1700 x 750

CENTRO DUO

Mod. 132

CONODUO

Mod. 732

CLASSIC DUO

Mod. 107

VAIO SET

Mod. 954/955

PURO

Mod. 652/656

SANIFORM

Mod. 373/336

1800 x 800

CENTRO DUO

Mod. 133

CONODUO

Mod. 733

DYNA SET

Mod. 622/623

VAIO DUO

Mod. 950

CLASSIC DUO

Mod. 110

VAIO SET

Mod. 946/947

PURO

Mod. 653/657

SANIFORM PLUS

Mod. 375/337

1900 x 900

CONODUO

Mod. 734

CLASSIC DUO

Mod. 114

PURO

Mod. 696/697


2000 x 1000

CONODUO

Mod. 735

BASSINO

Mod. 144

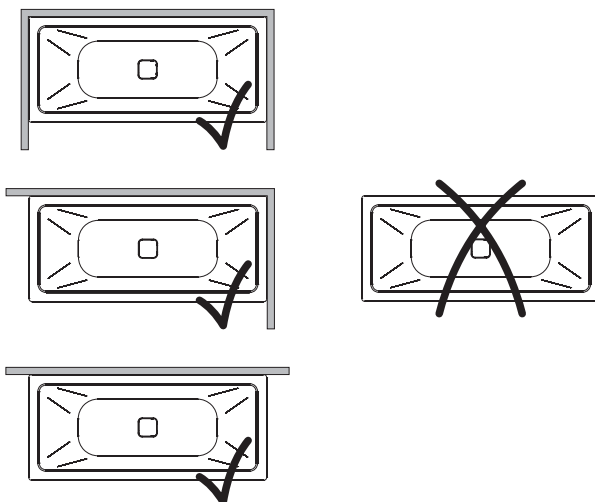

2


AUFKLEBEN DER AUFNAHMEN

GLUING OF THE ATTACHMENT BUTTONS
IN POSITION

COLLAGE DES LOGEMENTS

INCOLLATURA DEGLI ALLOGGIAMENTI

PEGAMIENTO DE LOS DISPOSITIVOS DE
SUJECIÓN

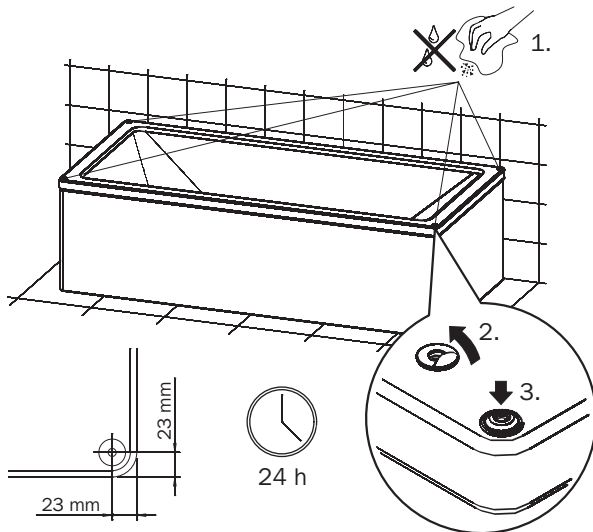

3


ANBRINGEN DER RELAXLIEGE

PLACING OF THE RELAX LOUNGER IN
POSITION

MISE EN PLACE DU COUCHAGE RELAX



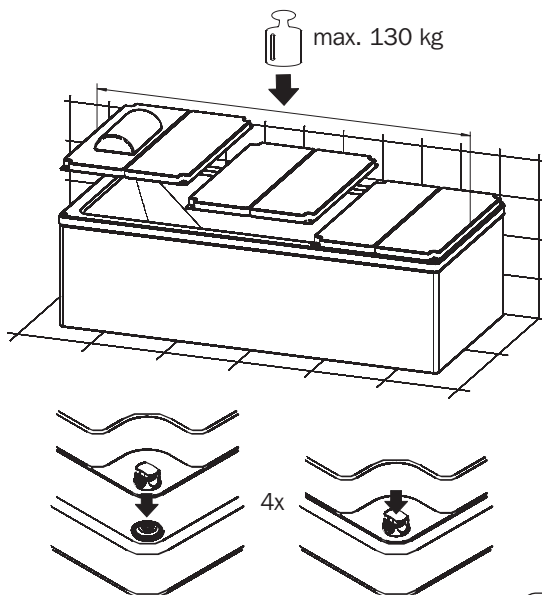


POSA DEL LETTINO RELAX

COLOCACIÓN DE LA TUMBONA RELAX










4





BINDING REGULATIONS

-  Transport the relax lounge only in its delivery packaging and avoid improper stresses in the process.
-  Kaldewei does not assume liability for damage due to improper intermediate storage and improper transport.
-  Kaldewei does not assume liability for damage caused by faulty installation and start-up, unsuitable and improper use by the purchaser or third parties.
-  Kaldewei does not assume liability for damage due to natural wear and tear, lack of cleaning or negligent cleaning, improper treatment or maintenance, unsuitable cleaning agents as well as for other chemical influences.
-  These instructions for use should be retained for future reference.

NOTES TO THE USER

-  Electrical appliances (such as hair dryers or electric razors) should not be placed on the relax lounge, even if the bathtub is not used. Electrical appliances in the bathroom should be placed or fixed in such a way that they cannot drop into the bathtub.
-  The relax lounge may exclusively be used as accessory for the stated bathtub models.
-  The relax lounge is to be placed over the bathtub in the correct position (attachment buttons at the bathtub edge).
-  The relax lounge is designed for the function of a lounge only.
-  The indicated maximum user weight (130 kg) should not be exceeded over the entire area of the relax lounge.
-  The relax lounge should not be used as storage tray for heavy or sharp-edged objects.
-  Do not stand on the relax lounge.

CLEANING

- **Normally**, it is sufficient to wipe the relax lounge after use with a damp cotton cloth.
- **If slightly soiled**, a cleaner with a neutral pH-value (5-7, e.g. washing up liquid or neutral soap) and a soft sponge or a cleaning cloth should be used.
- **If badly soiled**, the deposits should be soaked for a prolonged period (approx. 10-15 minutes) and the cleaning operation is to be repeated, if necessary.
-  After the use of cleaners, rinse the relax lounge thoroughly with water.
-  Other cleaners than those recommended by Kaldewei may damage the relax lounge. Observe the manufacturer's instructions indicated on the cleaners.
-  Do not use scouring or sand-containing cleaners. Chlorine-containing disinfectants or aggressive cleaners (e.g. acetone, cellulose thinner, benzene) may attack or bleach the surface.
-  Only use soft cleaning cloths or sponges for maintenance of the surface. Do not use scrubbing brushes/sponges, steel wool or other tools under any circumstances.

Franz Kaldewei GmbH & Co. KG
Beckumer Strasse 33-35
59229 Ahlen
Germany
Tel. +49 2382 785 0
Fax +49 2382 785 200
www.kaldewei.com